

Continue



























Melnor AquaTimer 63100 - Two Zone Automatic Water Timer Manual PARTS AND FEATURES Understanding Zones This is a two zone timer allowing you to water two different areas from the same faucet. Each zone can be programmed with up to four different start times. Battery Installation & Assembly Remove the battery holder from the back of the Timer Control Unit. Insert two AA alkaline batteries (Do not use rechargeable batteries) as indicated on the battery holder. Replace the battery holder, making sure that it is firmly and securely placed in the Timer Control Unit. NOTE: Do not use your timer when the air temperature is below 40°F (4.5°C). When storing your timer, be sure it is in a dry place and protected from frost. We recommend replacing batteries when the indicator reaches: Installation of the Timer Attach the timer to an outside faucet and turn on the water. The water must be left on while the timer is attached to the faucet for your timer to operate. NOTE: You may choose to program your timer before or after attaching it to the faucet. SETTING THE CLOCK Touch any button to wake the timer. Using the button, move the arrow to SELE Press the & buttons to adjust the clock to the current time. Press the button again to set the time and move to the next setting. START WATER, SELECT WHEN TO WATER with the arrow pointing to START WATER, use the & buttons to select the first watering cycle. Press the button to select the new watering cycle. Press the button to go to the next setting. HOW LONG, use the & buttons to select the length of each watering cycle. Cycles can be up to 360 minutes (6 hours) in duration. Press the button to move to the next setting. SELECT HOW OFTEN TO WATER with the arrow pointing to HOW OFTEN, use the & buttons to select the watering frequency. Watering can be as often as Every 1 Hour or as little as Every 7 days (once per week). EVERY 1 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY EVERY WEEK EVERY 2 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY EVERY TWO WEEK EVERY 3 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY WEEK ONE WEEK TWO SETTING ANOTHER ZONE When you have set START WATER, HOW LONG and HOW OFTEN for zone 1, press the button to go back to START WATER. Press to select Zone 2, and repeat steps 4-6 above. When all desired zones are set, press the button to enter AUTO mode. AUTO MODE After programming, the timer will be in AUTO mode. The screen display will alternate between showing the current time and the next watering cycle of each zone. If the next watering cycle is more than 24 hours away, the NEXT START TIME will be displayed in days instead showing a time. RAIN DELAY MODE If there is rain in the forecast, you can temporarily suspend your watering program on both zones for up to 7 days using the RAIN DELAY feature. RAIN DELAY mode will stop all watering for up to 7 days. After the selected delay has ended, your watering program will automatically resume. To activate RAIN DELAY mode, make certain the arrow is pointing to AUTO. Press the key to select the delay period. You can reduce the delay period with the key. In RAIN DELAY mode, the screen will toggle between the current TIME and the remaining DELAY time. If the delay is greater than 12 hours, the DELAY will be shown in DAYS. OFF MODE If you wish to stop watering for an extended period, push the button until the arrow is pointing to OFF. The timer will be off for 90 days. MANUAL WATERING To use a hose or other watering tool, simply press the button. Then use the button to select which zone you want to use. Using the button, select the length of time you wish to water. After a few seconds, the valve will open, and then automatically close when the selected time is reached. To quit the manual function, press the button again. Note: The timer will hold the last manual time in its memory. To reset the manual time back to zero, press the arrow keys to adjust the time. TIMER RESET If you need to completely erase all settings in the timer and return it to its original state, press and hold the button for 7 seconds. The screen will display RESET. NOTE: All programming will be lost when the timer is RESET. Intended for outdoor use only. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less than 40°F (4.5°C). When not in use, remove batteries, drain and store indoors away from freezing temperatures. Documents / Resources Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc. Download Melnor AquaTimer 63100 - Two-Zone Automatic Water Timer Manual Mode d'emploi Instructions Congratulations! You are now the owner of a Melnor AquaTimer Model 3015, one of the most versatile and easiest to set water timers ever built. Installing the Battery Remove screws and lift off the battery cover. You may need to use the screwdriver to gently pry off the battery cover. Insert one 9V battery and replace battery cover and screws. Make note of the positive and negative contacts. Attaching the Timer to the Faucet NOTE: Your AquaTimer can be programmed on or off the faucet. It may be easier to program the timer first and then attach it. Simply attach the top coupling nut to the faucet by twisting the nut clockwise. The nut should be snug. Do not overtighten. Once the AquaTimer is attached, turn on the faucet and leave it on for at least 1 minute. Press the button to select the first watering cycle. Press the button to go to the next setting. HOW LONG, use the & buttons to select the length of each watering cycle. Cycles can be up to 360 minutes (6 hours) in duration. Press the button to move to the next setting. SELECT HOW OFTEN TO WATER with the arrow pointing to HOW OFTEN, use the & buttons to select the watering frequency. Watering can be as often as Every 1 Hour or as little as Every 7 days (once per week). EVERY 1 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY EVERY WEEK EVERY 2 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY EVERY TWO WEEK EVERY 3 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY WEEK ONE WEEK TWO SETTING ANOTHER ZONE When you have set START WATER, HOW LONG and HOW OFTEN for zone 1, press the button to go back to START WATER. Press to select Zone 2, and repeat steps 4-6 above. When all desired zones are set, press the button to enter AUTO mode. AUTO MODE After programming, the timer will be in AUTO mode. The screen display will alternate between showing the current time and the next watering cycle of each zone. If the next watering cycle is more than 24 hours away, the NEXT START TIME will be displayed in days instead showing a time. RAIN DELAY MODE If there is rain in the forecast, you can temporarily suspend your watering program on both zones for up to 7 days using the RAIN DELAY feature. RAIN DELAY mode will stop all watering for up to 7 days. After the selected delay has ended, your watering program will automatically resume. To activate RAIN DELAY mode, make certain the arrow is pointing to AUTO. Press the key to select the delay period. You can reduce the delay period with the key. In RAIN DELAY mode, the screen will toggle between the current TIME and the remaining DELAY time. If the delay is greater than 12 hours, the DELAY will be shown in DAYS. OFF MODE If you wish to stop watering for an extended period, push the button until the arrow is pointing to OFF. The timer will be off for 90 days. MANUAL WATERING To use a hose or other watering tool, simply press the button. Then use the button to select which zone you want to use. Using the button, select the length of time you wish to water. After a few seconds, the valve will open, and then automatically close when the selected time is reached. To quit the manual function, press the button again. Note: The timer will hold the last manual time in its memory. To reset the manual time back to zero, press the arrow keys to adjust the time. TIMER RESET If you need to completely erase all settings in the timer and return it to its original state, press and hold the button for 7 seconds. The screen will display RESET. NOTE: All programming will be lost when the timer is RESET. Intended for outdoor use only. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less than 40°F (4.5°C). When not in use, remove batteries, drain and store indoors away from freezing temperatures. Documents / Resources Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc. Download Melnor AquaTimer 63100 - Two-Zone Automatic Water Timer Manual Mode d'emploi Instructions Congratulations! You are now the owner of a Melnor AquaTimer Model 3015, one of the most versatile and easiest to set water timers ever built. Installing the Battery Remove screws and lift off the battery cover. You may need to use the screwdriver to gently pry off the battery cover. Insert one 9V battery and replace battery cover and screws. Make note of the positive and negative contacts. Attaching the Timer to the Faucet NOTE: Your AquaTimer can be programmed on or off the faucet. It may be easier to program the timer first and then attach it. Simply attach the top coupling nut to the faucet by twisting the nut clockwise. The nut should be snug. Do not overtighten. Once the AquaTimer is attached, turn on the faucet and leave it on for at least 1 minute. Press the button to select the first watering cycle. Press the button to go to the next setting. HOW LONG, use the & buttons to select the length of each watering cycle. Cycles can be up to 360 minutes (6 hours) in duration. Press the button to move to the next setting. SELECT HOW OFTEN TO WATER with the arrow pointing to HOW OFTEN, use the & buttons to select the watering frequency. Watering can be as often as Every 1 Hour or as little as Every 7 days (once per week). EVERY 1 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY EVERY WEEK EVERY 2 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY EVERY TWO WEEK EVERY 3 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY WEEK ONE WEEK TWO SETTING ANOTHER ZONE When you have set START WATER, HOW LONG and HOW OFTEN for zone 1, press the button to go back to START WATER. Press to select Zone 2, and repeat steps 4-6 above. When all desired zones are set, press the button to enter AUTO mode. AUTO MODE After programming, the timer will be in AUTO mode. The screen display will alternate between showing the current time and the next watering cycle of each zone. If the next watering cycle is more than 24 hours away, the NEXT START TIME will be displayed in days instead showing a time. RAIN DELAY MODE If there is rain in the forecast, you can temporarily suspend your watering program on both zones for up to 7 days using the RAIN DELAY feature. RAIN DELAY mode will stop all watering for up to 7 days. After the selected delay has ended, your watering program will automatically resume. To activate RAIN DELAY mode, make certain the arrow is pointing to AUTO. Press the key to select the delay period. You can reduce the delay period with the key. In RAIN DELAY mode, the screen will toggle between the current TIME and the remaining DELAY time. If the delay is greater than 12 hours, the DELAY will be shown in DAYS. OFF MODE If you wish to stop watering for an extended period, push the button until the arrow is pointing to OFF. The timer will be off for 90 days. MANUAL WATERING To use a hose or other watering tool, simply press the button. Then use the button to select which zone you want to use. Using the button, select the length of time you wish to water. After a few seconds, the valve will open, and then automatically close when the selected time is reached. To quit the manual function, press the button again. Note: The timer will hold the last manual time in its memory. To reset the manual time back to zero, press the arrow keys to adjust the time. TIMER RESET If you need to completely erase all settings in the timer and return it to its original state, press and hold the button for 7 seconds. The screen will display RESET. NOTE: All programming will be lost when the timer is RESET. Intended for outdoor use only. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less than 40°F (4.5°C). When not in use, remove batteries, drain and store indoors away from freezing temperatures. Documents / Resources Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc. Download Melnor AquaTimer 63100 - Two-Zone Automatic Water Timer Manual Mode d'emploi Instructions Congratulations! You are now the owner of a Melnor AquaTimer Model 3015, one of the most versatile and easiest to set water timers ever built. Installing the Battery Remove screws and lift off the battery cover. You may need to use the screwdriver to gently pry off the battery cover. Insert one 9V battery and replace battery cover and screws. Make note of the positive and negative contacts. Attaching the Timer to the Faucet NOTE: Your AquaTimer can be programmed on or off the faucet. It may be easier to program the timer first and then attach it. Simply attach the top coupling nut to the faucet by twisting the nut clockwise. The nut should be snug. Do not overtighten. Once the AquaTimer is attached, turn on the faucet and leave it on for at least 1 minute. Press the button to select the first watering cycle. Press the button to go to the next setting. HOW LONG, use the & buttons to select the length of each watering cycle. Cycles can be up to 360 minutes (6 hours) in duration. Press the button to move to the next setting. SELECT HOW OFTEN TO WATER with the arrow pointing to HOW OFTEN, use the & buttons to select the watering frequency. Watering can be as often as Every 1 Hour or as little as Every 7 days (once per week). EVERY 1 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY EVERY WEEK EVERY 2 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY EVERY TWO WEEK EVERY 3 DAY SUNDAY MONDAY TUESDAY WEDNESDAY THURSDAY FRIDAY SATURDAY WEEK ONE WEEK TWO SETTING ANOTHER ZONE When you have set START WATER, HOW LONG and HOW OFTEN for zone 1, press the button to go back to START WATER. Press to select Zone 2, and repeat steps 4-6 above. When all desired zones are set, press the button to enter AUTO mode. AUTO MODE After programming, the timer will be in AUTO mode. The screen display will alternate between showing the current time and the next watering cycle of each zone. If the next watering cycle is more than 24 hours away, the NEXT START TIME will be displayed in days instead showing a time. RAIN DELAY MODE If there is rain in the forecast, you can temporarily suspend your watering program on both zones for up to 7 days using the RAIN DELAY feature. RAIN DELAY mode will stop all watering for up to 7 days. After the selected delay has ended, your watering program will automatically resume. To activate RAIN DELAY mode, make certain the arrow is pointing to AUTO. Press the key to select the delay period. You can reduce the delay period with the key. In RAIN DELAY mode, the screen will toggle between the current TIME and the remaining DELAY time. If the delay is greater than 12 hours, the DELAY will be shown in DAYS. OFF MODE If you wish to stop watering for an extended period, push the button until the arrow is pointing to OFF. The timer will be off for 90 days. MANUAL WATERING To use a hose or other watering tool, simply press the button. Then use the button to select which zone you want to use. Using the button, select the length of time you wish to water. After a few seconds, the valve will open, and then automatically close when the selected time is reached. To quit the manual function, press the button again. Note: The timer will hold the last manual time in its memory. To reset the manual time back to zero, press the arrow keys to adjust the time. TIMER RESET If you need to completely erase all settings in the timer and return it to its original state, press and hold the button for 7 seconds. The screen will display RESET. NOTE: All programming will be lost when the timer is RESET. Intended for outdoor use only. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 115°F (46°C). Do not use when the ambient air temperature is less than 40°F (4.5°C). When not in use, remove batteries, drain and store indoors away from freezing temperatures. Documents / Resources Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc. Download Melnor AquaTimer 63100 - Two-Zone Automatic Water Timer Manual Mode d'emploi Instructions Congratulations! You are now the owner of a Melnor AquaTimer Model 3015, one of the most versatile and easiest to set water timers ever built. Installing the Battery Remove screws and lift off the battery cover. You may need to use the screwdriver to gently pry off the battery cover. Insert one 9V battery and replace battery cover and screws. Make note of the positive and negative contacts. Attaching the Timer to the Faucet NOTE: Your Aqua