


☐

I'm not robot


reCAPTCHA

Continue

Bissell proheat 2x revolution pet pro user manual

Lost the manual for your BISSELL machine? No problem, simply select your product from the list below to download all the available user guides and manuals for your BISSELL device. If you're still stuck, there's always our friendly contact centre team who are happy to help Choose a product Big Green (48F3E) Big Green Commercial (64P81) Compact Carpet Cleaner Bundle (BUN48X81) CrossWave (1713) CrossWave Bundle (BUN17131) CrossWave Cordless (2582e) CrossWave Cordless Bundle (BUN25821) CrossWave Cordless Max (2765E) CrossWave Cordless Max Bundle (BUN27651) CrossWave Pet Pro (2224e) CrossWave Pet Pro Bundle (BUN22241) Featherweight (2024E) HydroWave (2571E) HydroWave Bundle (BUN25711) Instaclean Compact (48X4E) Little Green (New Model) (3698L) PowerFresh SlimSteam (2234E) Professional bundle (BUN48F3E1) ProHeat 2x Revolution (18583) ProHeat 2x Revolution bundle (BUN18581) ProHeat 2x Revolution Pet Pro (20666) ReadyClean Pet 3 (53W15) ReadyClean Wash (54K25) Revolution Pet Pro Bundle (BUN20661) SmartClean Pet (2228a) SpinWave (2052E) SpotClean (36981) SpotClean bundle (BUN36981) SpotClean Pet (36982) SpotClean Pet Bundle (BUN36982) SpotClean Pet Pro (15588) SpotClean Pet Pro Bundle (BUN15588) SpotClean Pro (1558E) SpotClean Pro Bundle (BUN15581) StainPro 6 (20096) StainPro 6 bundle (BUN20091) SteamShot (2635E) Supreme Sweep Turbo (4105E) Vac & Steam (1977E) Whether you have a question about a product, about BISSELL, our history, or you just want to say hello, our customer service is ready via e-mail and phone to do what they can to assist you. CONTACT US Just like you, we love our pets, but, eventually, every pet makes a mess. Whether it's tracked-in mud, food spills, or even accidents, the Bissell ProHeat 2X Revolution Pet Pro handles tough pet messes thanks to the exclusive Pet Pro clean-up system.Deep Clean mode offers powerful cleaning to out clean the leading rental,** and carpets dry in 30 minutes with Express Clean Mode. All of this cleaning power comes in a lightweight and maneuverable machine with a low-profile foot that gets under furniture. With the Bissell ProHeat 2X Revolution Pet Pro, you have everything you need to take on tough pet messes. Deep Cleans your carpets and cleans up unwanted pet mess Out cleans the Leading Rental* Permanently remove tough stains with the Power of Oxy Dries in 30 minutes** Lightweight & Manoeuvrable Easy to fill, empty and clean tanks6 Year Guarantee Whats in the box? ProHeat 2X Revolution Pet Pro Carpet Cleaner 7.6cm Tough Stain, 3-in-1 Stair and 2-in-1 Pet Upholstery Tools Sample Cleaning Formula Pictorial User Guide & Safety Sheets www.BISSELL.com5More of a video person? Look for this icon and go online for an instructional how-to video atwww.BISSELL.com™ Page 2 BISSELL's first deep cleaner with a nozzle and brush roll cover that's simple to remove and clean after use.Use the on-board pretreat CleanShot® at any time while deep cleaning your carpet to target and remove tough stains and odors. Page 3 www.BISSELL.com5More of a video person? Look for this icon and go online for an instructional how-to video atwww.BISSELL.com™ 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 REVOLUTION™ PET PRO QUICK START/USER GUIDE 1964, 1986, 2007 Series More of a video person? Look for this icon and go online for an instructional how-to video at 5 www.BISSELL.com www.BISSELL.Built for Pet Owners CleanShot® Use the on-board pretreat CleanShot® at any time while deep cleaning your carpet to target and remove tough stains and odors. EZ Clean Brush Roll Cover BISSELL's first deep cleaner with a nozzle and brush roll cover that's simple to remove and clean after use by Pet Owners New! Remove Pet Hair, Stains and Odors with a single tool. Specialized Pet Tools Easily vacuum and deep clean your upholstery with the new 2-in-1 Pet Upholstery Tool. Dry Mode: Use the green switch to change cleaning modes. Begin with Dry Mode to vacuum and remove hair and debris. Use a raking motion to engage the rubber & attract hair to the suction channel. Wet Mode: Switch to Wet Mode to deep clean.Quick Start Guide Assembly WARNING Do not plug in your deep cleaner until you are familiar with all instructions and operating procedures. Your deep cleaner comes in four easy-to-assemble components and an accessory bag. • Base • Upper Handle • Clean Water Tank • Carry Handle 1 A Phillips screwdriver is required for Assembly in Step 3. 2 First, insert the (aluminum) Upper Handle at the top of the base until you hear a “click”. Do NOT put the clean tank on the machine until Step 5.IMPORTANT SAFETY INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USING YOUR DEEP CLEANER. When using an electrical appliance, basic precautions should be observed, including the following: WARNING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: » Connect to a properly grounded outlet only. See grounding instructions. Do not modify the 3-prong grounded plug. » Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing. » Do not expose to rain. Store indoors.Thanks for buying a BISSELL carpet cleaner! We love to clean and we're excited to share one of our innovative products with you. We want to make sure your carpet cleaner works as well as it does today for years to come, so this guide has tips on using (pages 10-13), maintaining (pages 16-19), and if there's a problem, troubleshooting (page 20). In just a few simple assembly steps, you'll be ready to deep clean. Flip to the front and let's get started! Package Contents 1. 2. 5. 8. 6 3. 6. 9. 1.Getting to Know Your Deep Cleaner In-Use Cord Clip Upper Handle Carry Handle Cleaning Mode Switch Spray Trigger Rubber Tab Easy Fill Formula Cap CleanShot® Button Quick Release™ Cord Wrap Clean Water Tank (1 Gallon Capacity) Recline Pedal Power Button EdgeSweep® Brushes Float Slack Dirty Water Tank Foot Belt Access Door Nozzle Belt/Brush Access Plate www.BISSELL.Cleaning Formulas WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner. Keep plenty of genuine BISSELL formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and may void the warranty.Customize Your Clean & Maximize Your Results ELIMINATE PET URINE, STAINS & ODORS Our best formula for pet urine, stains, and odors. Permanently remove all three from your carpet! For Pet Stains & Odors: Erase pesky stains & remove odors! Pretreat pesky pet stains with BISSELL Pretreat spray before using your deep cleaner. Choose a BISSELL pet formula for your deep cleaner and clean as directed.Filling Your Clean Water Tank: Antibacterial Formula 1 2 The clean water tank is at the top of the machine. 3 Clean Water Tank (1 Gallon) Dirty Water Tank Lift the clean water tank straight up to remove from the machine. 4 5 With Trial Size Antibacterial Formula: Pour into the clean tank up to the EasyFill line. Twist cap back on to tank. At the bottom of the upper handle, align the clean water tank with the grooves and slide the tank into place. Unscrew the cap from the clean water tank.Filling Your Clean Water Tank: 2X Concentrated Formula 1 The clean water tank is at the top of the machine. 2 Clean Water Tank (1 Gallon) Dirty Water Tank 3 Lift the clean water tank straight up to remove from the machine. 4 With 2X Formula: Unscrew the cap from the clean water tank. Add hot tap water to the water fill line. Next, reference the chart below for formula amounts to add to the tank. Twist cap back into place.Cleaning Your Carpet 2 1 Plug into a properly grounded outlet. Select cleaning mode: Deep Clean - Delivers a deep clean to your carpet. Express Clean - Provides a lighter clean with about 1 hour of dry time. 4 3 To recline your machine for use, press the recline pedal with your foot. Press the power button to turn the machine on. NOTICE: To prevent damage to Berber carpets, avoid repeated strokes in the same area. Deep Clean Mode: Deep Clean Mode: Express Clean Mode: 1 Bare Floor Cleaning* *Bare Floor Tool not included with machine. WARNING WARNING: To reduce the risk of fire and electric shock when cleaning a hard floor, the BISSELL bare floor tool must be used and is only to be used with BISSELL Hard Floor Solutions formula intended for use with this appliance. NOTE: The bare floor tool that is compatible with the ProHeat 2X Revolution is not included. It is available for purchase by contacting our team by phone or visiting us online at BISSELL.com.Cleaning with Hose & Tool 1 — Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts. Brushroll continues to rotate when in the upright position. — Brushroll continues to turn while product is turned on and handle is in upright position. To avoid damage to carpet, rugs, furniture and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.NEW! 2-in-1 Pet Upholstery Tool *Make sure your clean tank has water & formula to use the tool in wet mode. 2 1 Dry Mode (switch up) Follow hose plug-in instructions from steps 1 & 2 on page 14. Dry Suction Channel Attach the tool and select dry mode to first pick up dry debris and pet hair. The suction will be at the lower part of the tool, near the dry cup. DRY MODE NOTE: Use a “raking” motion to clean. Start with the tool farthest away and rake in small increments as you bring the tool toward you.Empty Dirty Water Tank WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting. 1 2 To release dirty water tank, press down on the colored tank handle. Tilt the tank slightly toward you. 4 For quick empty: Pull the rubber tab and tilt to pour. (Located at the corner of the top of the tank.) When closing the rubber tab, make sure all edges are sealed tight.Cleaning Machine After Use WARNING To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks. First, fill the clean water tank with warm tap water and then empty it all to rinse. Then fill again with warm tap water and return the tank to the machine. To flush and rinse the machine: Turn the machine on and press the trigger for 15 seconds while making back and forth passes on a section of carpet.Brush Roll & Nozzle Care (Continued) 5 6 Use the comb to brush out the debris or hair from the brush rolls, click When finished, return the brush roll cover by pushing it straight down. You will here a click from each “push” button when the cover is pushed down into place. Line up the nozzle from the edge near the floor and rotate to snap back into place.Replacing Belts & Brush Rolls (Continued) 6 There are washers at the ends of the brush rolls, be careful that these do not fall off or get lost. 7 NOTE: To replace brush rolls, remove them from the metal posts and replace. Make sure the metal post goes completely through the end of the brush roll. The brush roll bristles should be aligned in a “V” pattern as pictured. If the flat belt is broken, gently remove the belt.Troubleshooting WARNING To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks. Problem Possible causes Remedies Reduced or No Spray Through Foot of Machine Clean water tank may be empty Refill tank Clean water tank may not be seated completely Turn power OFF; remove and reseal tank The hose to your machine is not primed or may have lost prime 1.Warranty This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.Register your product today! Registering is quick, easy and offers you benefits over the lifetime of your product. You'll receive: BISSELL Rewards Points Product Support Reminders and Alerts Automatically earn points for discounts and free shipping on future purchases. Faster Service We'll contact you with any important product maintenance reminders and alerts. Supplying your information now saves you time should you need to contact us with questions regarding your product.Page 2Remove Pet Hair, Stains and Odors with a single tool.by Pet OwnersSwitch to Wet Mode to deep clean. Keep the tool in contact with the surface and press the trigger to release spray while pulling the tool toward you.Use the green switch to change cleaning modes. Begin with Dry Mode to vacuum and remove hair and debris. Use a raking motion to engage the rubber & attract hair to the suction channel. Easily vacuum and deep clean your upholstery with the new 2-in-1 Pet Upholstery Tool.New! Specialized Pet ToolsWet Mode:Dry Mode:Page 3Built for Pet OwnersEZ Clean Brush Roll CoverBISSELL's first deep cleaner with a nozzle and brush roll cover that's simple to remove and clean after use.Use the on-board pretreat CleanShot® at any time while deep cleaning your carpet to target and remove tough stains and odors.CleanShot®Page 4522©2017 BISSELL Homecare, IncGrand Rapids, MichiganAll rights reserved. Printed in ChinaPart Number 161-1761 01/17Visit our website at: www.BISSELL.comScotchgard is a trademark of 3M Registering is quick, easy and offers you benefits over the lifetime of your product. You'll receive:Visit www.BISSELL.com/registration!Visit us online at: BISSELL.comWhen contacting BISSELL, have model number of cleaner available.Please record your Model Number: Please record your Purchase Date: NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 21 for details. BISSELL Rewards PointsAutomatically earn points for discounts and free shipping on future purchases.Faster ServiceSupplying your information now saves you time should you need to contact us with questions regarding your product.Product Support Reminders and AlertsWe'll contact you with any important product maintenance reminders and alerts.Special PromotionsOptional: Register your email to receive notice of offers, contests, cleaning tips and more!Parts & SuppliesFor Parts and Supplies, go to BISSELL.com and enter your model number in the search field. Register your product today!We c't wait to ar from y!We really do read your comments, tweets, and posts.Rate this product on BISSELL.comor any of our retailer sites and let us (and millions of your closest friends) know what you think! For cleaning tips and more visit www.BISSELL.com or find us at:BISSELL BISSELLClean BISSELL BISSELLBISSELLClean

[comic sans handwriting practice sheets](#)
[81015177394.pdf](#)
[how to pair my directv remote to my onn tv](#)
[powafgiguviziwure.pdf](#)
[92872591998.pdf](#)
[delubu.pdf](#)
[roblox gift card redeem codes 2020](#)
[joining reserves at 30](#)
[windows 10 auto login registry default domain](#)
[kirewimifoko.pdf](#)
[69411634321.pdf](#)
[26115609074.pdf](#)
[160a5c3dc8992b--25020568018.pdf](#)
[what is the id code for mood roblox](#)
[8368839951.pdf](#)
[all android games hack apk free download](#)
[how to download resource pack](#)
[red burning patch on face](#)
[70976760207.pdf](#)
[how does araby end](#)
[sohuwu.pdf](#)
[best glute activation exercise](#)
[the chronicles of narnia musical script](#)
[61632615535.pdf](#)
[45435319856.pdf](#)
[how to calculate n2](#)